

WZ-400

ADDRESSABLE REMOTE INDICATOR

The **WZ-400** indicator is used to indicate the selected events in the fire alarm system by LEDs. The events may involve:

- a single detector / a single side line module:
 - alarm triggered by detector / module
 - faulty detector / module
 - disabled detector / module
- zones:
 - alarm in zone
 - faulty device in zone
 - disabled device in zone
- groups:
 - activation of group sounders
 - faulty device in group
 - disabled device in group

The indicator is designed to operate in the detection line of the **ACSP-402** addressable fire alarm control panel.

- optical signaling by LEDs
- signaling controlled by the control panel:
 - capability to link the indicator with a single detector, a single side line module, zone or group
 - selection of events to be indicated
- double-sided short-circuit isolator
- powered from the detection line

