

# RS232-RSTTL

**RS232-RSTTL** is a cable with a converter used to connect the RS232 connector of the **ETHM-1 Plus** Ethernet module with the RS232 (TTL) connector of the **PERFECTA 64 M** control panel or **VERSA** family control panels.

- equipped with terminals for connecting a 12 V DC power supply – applies to work with the **PERFECTA 64 M** control panel

